

# **SNAP10**

 
## **Digital Photo Frame**

**User Manual**

What's In the Box?.....	3
Instructions Guide.....	
Controls and functions.....	5
Remote control functionality.....	6
Basic Information.....	8
Photo frame set-up.....	10
Connecting and sharing photos and videos.....	11
Frameo App.....	12
Photo frame main menu.....	13
Photo frame settings menu.....	17
Troubleshooting.....	24
Support & Warranty.....	25
Product specifications.....	26
Safety Information .....	27


## What's in the Box?

- A. ClickID Snap 10 Photo Frame
- B. Power Cable
- C. Remote Control
- D. Photo Stand Bracket
- E. 2x 1.5V AAA Batteries
- F. User Manual

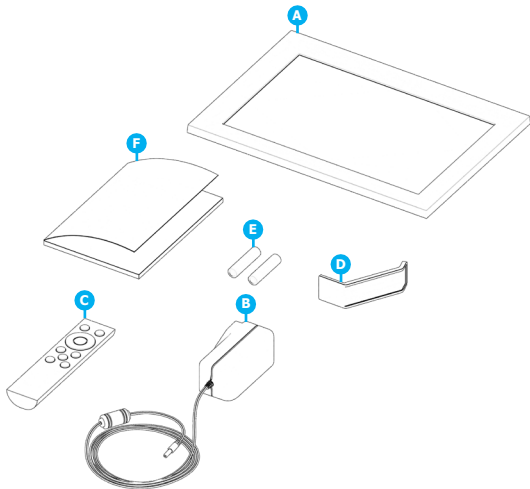


## ClickID Snap10 Photo Frame Front View

LCD Display with touch screen

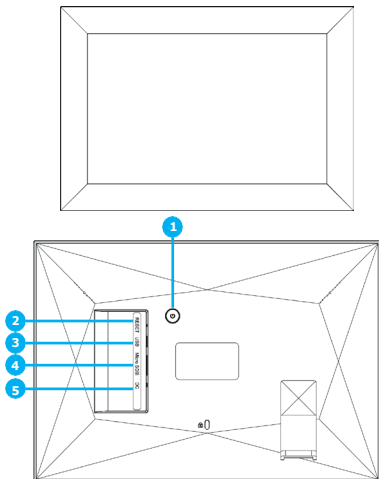

- |    |              |    |                     |
|----|--------------|----|---------------------|
| 1. | Power ON/OFF | 4. | Micro SD Slot       |
| 2. | Reset        | 5. | DC Power Cable Jack |
| 3. | USB Port     |    |                     |

## Remote Control

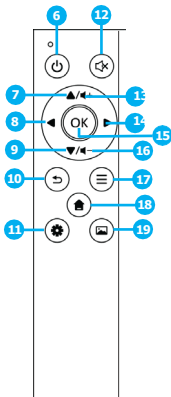

- |  |  |
|--|--|
| 6. Power ON/OFF                              |  |
| 7. Up Button                                 |  |
| 8. Left Button                               |  |
| 9. Down Button                               |  |
| 10. Back Button                              |  |
| 11. Settings                                 |  |
| 12. Mute Button                              |  |
| 13. Press and hold for 2 seconds for Volume+ |  |
| 14. Right Button                             |  |
| 15. 'OK' Button – Press to confirm           |  |
|  | 16. Press and hold for 2 seconds for Volume-                     |
|  | 17. Main Menu – Press to enter the Frameo Menu                   |
|  | 18. Home Button - Press to return to the Frameo home page        |
|  | 19. Gallery – Press the button to enter the Frameo Photo Gallery |

# Remote control functionality

Please note that some buttons on the remote control do not function in all modes. Here are the details:

To use the remote control with the ClickKid Snap10 Photo Frame, access the 'Frameo Settings', and press a button on the remote control to activate it. Once the remote control is activated, you can operate the ClickKid Snap10 using the remote from a distance of 3-5 metres.

**Transferring video to the ClickKid Snap10 via the Frameo App: When transferring a video to the ClickKid Snap10 using the Frameo app, utilise the following buttons on the remote control:**

- Power (Rem.6)
- Left (Rem.8)
- Back (Rem.10)
- Settings (Rem.11)
- Mute (Rem.12)
- Right (Rem.14)
- Menu (Rem.17)
- Gallery (Rem.19)

***PLEASE NOTE: in this mode, the following buttons on the remote control are disabled:***

- Up (Rem.7)
- Down (Rem.9)
- Volume - (Rem.16)
- Volume +(Rem.13)
- OK (Rem.15)
- Home (Rem.18)

**Transferring Photos to the Cloud Photo Frame via the the Frameo App: When transferring photos to the cloud photo frame through the Frameo app, use the following buttons on the remote:**

- Power (Rem.6)
- Left (Rem.8)
- Back (Rem.10)
- Settings (Rem.11)
- Right (Rem.14)
- Menu (Rem.17)
- Gallery (Rem.19)

# Remote control functionality

**PLEASE NOTE:** In this mode, the following buttons on the remote control are disabled:

- Up (Rem.7)
- Down (Rem.9)
- Mute (Rem.12)
- Volume + (Rem.13)
- OK (Rem.15)
- Volume - (Rem.16)
- Home (Rem.18)

**Using the Cloud Photo Frame Home Interface:** After accessing the cloud photo frame's HOME interface, operate the photo frame using the following buttons on the remote control:

- Power (Rem.6)
- Up (Rem.7)
- Left (Rem.8)
- Down (Rem.9)
- Settings (Rem.11)
- Back (Rem.10)
- Right (Rem.14)
- OK (Rem.15)
- Home (Rem.18)
- Gallery (Rem.19)

**Please note:** In this mode, the following buttons on the remote control are disabled:

- Volume + (Rem.13)
- Volume - (Rem.16)
- Mute (Rem.12)
- Menu (Rem.17)

**Deleting Content in the Photo Frame Home Interface:** In the HOME interface of the photo frame, content deletion via remote control is not supported. To delete photos or videos, please use the app or device interface.

**Please Note:** The instructions within this leaflet refer to the buttons on the remote control as (Rem.number) in accordance with the diagram for 'Controls & Functions' on page 5 of the user manual.

## Basic Information

The ClickID Snap 10 Photo Frame supports photo and movie playback, built-in 32GB memory, 2.4GHz Wi-Fi and touch screen.

Designed with 10-point touch panel, it's easy for users to setup the frame and manage photos conveniently.

High Definition IPS Panel with resolution 800X1280 IPS/16:10 panel shows bright photos from any viewing angle.

Portrait & Landscape & Auto Rotation & Wall-mountable: With a detachable solid rack as a frame stand, allowing you to view the photos in either portrait or landscape mode, and photos can automatically rotate. The frame can also be mounted on the wall (wall brackets not included).



## ClickID Snap 10 Photo Frame prepare for set-up.

Remove all packaging and prepare the frame for use. Unwind the power cable, insert one end into the frame, and then plug the cable supplied to mains power supply.

Press the 'ON/OFF' button **(Ref.1)** to switch on.

Attention: When the ClickID Snap 10 Photo Frame is in use, DO NOT REMOVE the power cable. To switch OFF, press the 'ON/OFF' button **(Ref.1)**, and only after switching off, disconnect from the power source.

## Getting Started

If you are new to using ClickID Snap 10 Photo frame, then start by following the quick setup or follow the on-screen step-by-step guide when powering the frame on for the first time:

### ClickID Snap 10 Photo Frame Quick Setup

Once the ClickID Snap 10 Photo frame is switched on for the first time, a step-by-step guide will come up for you to follow:

- Select a language to be used on the ClickID Snap 10 Photo Frame.
- Connect your frame to your WIFI Internet Network.
- Once connected, you might be asked to download and update your ClickID Snap 10 Photo Frame software if there is a newer version available. It is recommended to update your photo frame before continuing your set-up.
- Enter your frame name, and the location where you have placed your frame e.g. 'John Doe' and 'Living Room'.
- Finally set the time zone if required also set the time and date.

The ClickID Snap10 photo frame has the 'Frameo' App.

To connect the ClickID Snap 10 Photo Frame with your friends ensure they downloaded and installed the 'Frameo' app.

Tap on the 'Add Friend' icon  on your frame, to generate a code.

A text box will appear on your frame display with a connection code. This code is valid for 12 hours.

Share the code with your friend using one of these methods of your choice e.g. SMS, E-Mail, IM, phone call.

Once your new friend has added the code in their Frameo app, they will automatically connect with your ClickID Snap 10 Photo frame and appear on your Friends List.

Follow these same steps for each new friend or family member you would like to add to your photo frame.


Your friends and family will now be able to send photos and short videos to your Click ID Snap10 Photo Frame.

Read the chapter 'Change options for a friend' to allow connected friends, to retrieve and share the connection code via the smartphone app.


*Please note: To receive photos and videos via Frameo App from your friends or family, the ClickID Snap 10 Photo Frame needs to be connected to a WIFI network and powered on.*

Ensure the notifications are on, to see when photos or videos are sent to your frame.

Once a photo has been sent to your frame, a notification will come up on your photo frame. Tap on it to view the photo/video received.

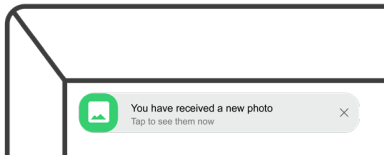

Double tap on the picture received to send a reaction to your friend.

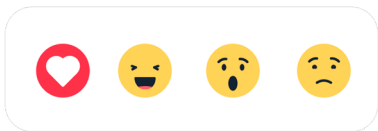

Once you have the photo frame set, you can start by connecting with your friends and family using the Frameo App.

## Installing & Using the 'Frameo' app.

The free smartphone app (Frameo) is available for both Android and iOS for direct photo sharing. Download the app to your smartphone, pair your smartphone to the photo frame, and then you can send one or multiple photos at a time to the frame anytime anywhere.

To send and receive photos to your frame, use the Frameo App available for iOS or Android.



**Find the Frameo app by scanning this code:**



**For Android:**

Search for 'Frameo' on Google Play

**For iOS:**

Search for 'Frameo' on App Store


The next step is to connect your frame with your friends and family using a code generated by the ClickID Snap 10 Photo Frame.

If you want to send photos to the frame by yourself, start by downloading the app for iOS or Android on App Store or Google Play on your phone. On your frame, tap 'Add Friend', a code will be automatically generated which you can use to connect your frame with your own phone via the Frameo App.

## Main Menu

### Navigating through your ClickID Snap 10 Photo Frame gallery

Swipe left or right on the display screen. Or use the arrow buttons on the remote control to go through your photos. To access the menu, simply tap the screen once, or press the 'MENU' button on remote control (**Rem.17**).

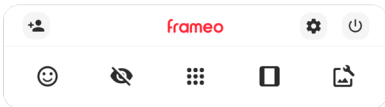

In the **ClickID Snap 10 Photo Frame Menu** you will find the most used features such as:

#### **Add a friend**

Tap to add and connect with friends and family using the code generated by the frame.

#### **Settings**

Tap to enter the ClickID Snap 10 Photo Frame **Settings**.

#### **Power Menu**

Tap to open the Power Menu, select to Power OFF, Restart or Sleep.

*Note: Ensure you are always using the 'Power Off' button on the device or in the Power Menu to turn Frameo off. Never disconnect power when the ClickID Snap10 Photo Frame is running.*

#### **React**

Tap to open the React Menu on the photo. Tap one reaction to let the sender know how you feel.

*Please note that the React Menu can also be accessed by double-tapping on the screen while viewing a photo or a video to send an immediate reaction to your friend.*

#### **Hide photo**

Hides the current photo. This means that the photo will no longer be shown in the slideshow. To make a hidden photo visible again go into the **Settings Menu- Manage Photos- Show/Hide Photo**.

## ☰ Gallery

Opens the ClickID Snap 10 Photo Frame gallery which allows for easy and fast navigate through your photos.




### Fit to frame/Fill frame.


This toggles how the photo is shown.

The 'Fill frame' option is the default. The photo is scaled so that it fills the whole screen. It will be centered around what is selected as the most important part. (See the first picture below).

Fit to frame will fit the entire photo centered on the screen. (See the second picture below).

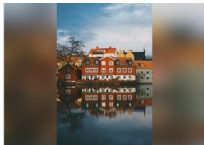

### Adjust photo



Tap  to enter and adjust the position of the photo in the frame for an even better fit. Here you can also use the 'Enter' button to rotate your photo, and you can edit the caption on imported photos. For received photos, please ask the sender to edit the caption in the Frameo app.


## Playing a Video

### Interacting with videos while playing

When a video is shown on the photo frame display, two additional controls are visible on the screen. One to play/pause the video and one to control the volume level.

Press  to start the video playback. Pressing  will pause the video playback. Press

to open  the volume controller. Use the slider to adjust the volume level. Pressing 

will mute the video while pressing  will unmute the video.



Enter the 'Settings' Menu to personalize your frame as per your needs.

## 'My Frame'

### Frame Name

Personalise/change your frame name. This frame name will be also visible for your connected friends and family on their list of frames via Frameo app.

### Frame Location

Set the location of your frame. This is also displayed on your friends' and family's list of connected frames which can help distinguish frames from each other.

### Set Language

Enter this section to change the menu language on your frame.

### Weather

The weather visible on your ClickID Snap 10 Photo Frame is automatically set at your location. However, should you wish to manually change and use a different location, you can do so when entering 'Weather Location'.

### Date and Time


Enter this section to set the Date and Time. Select your 'Time Zone', set a start day of the week or the clock format to 12 or 24 Hours.

*Please note that the ClickID Snap 10 Photo Frame will automatically try to set the correct date and time when connected to the Internet.*

### Manage Photos

Enter 'Manage Photos Menu' to view the total number of photos stored on your frame and the storage space used/unused. Manage your photo settings as per the followings:

### Show/Hide Photos

Select to view all photos to show or hide from the slideshow. Tap on a hidden photo to make this visible on slideshow or tap to hide a visible one. Hidden photos will NOT be deleted from your frame, and you can always access this section and make the hidden ones visible again. Use  to hide or show all photos.



### Delete Photos

Select photos that you want to permanently delete from your frame by tapping the photo.


Use  to select or deselect all and  to permanently delete the selected photos.


### Import Photos



Use this option to import photos or videos from an external storage (e.g. microSD card). To use this feature, you will first need to insert an SD card uploaded with photos or videos (not included) into the slot **(Ref.3)**.

*Please note: The micro-SD card or USB stick size must be up to 32GB, formatted into FAT32 before adding the photos or videos on it in supported formats.*

To import photos or videos from a USB stick/drive you must use an USB- C adaptor for your USB stick.

Start by selecting the photos/videos you want to import onto your frame. Once selected tap the import button  to start the process.

Use  to select the photos on the external storage (e.g. microSD card) which you would like to import.

Use  to arrange the order of photos before importing. Use  to set the photos in ascending or descending order.

### Transfer from Computer

Using the USB port on the photo frame **(Ref.4)** you can connect your frame with a PC using an USB-C cable to

USB 2.0/3.0. (not included) with the OTG functions (data transfer cable).

Once the frame has been connected to the PC, enable 'Transfer from computer' via Settings –Manage Photos. You can now import videos and photos to the photo frame in supported formats:

- Photo format: JPG, JPEG, PNG, WEBP.
- Video format: MP4 (UP TO 1080P).

### Export Photos


Use this feature to export photos from the frame to an external storage (e.g. microSD card).

The export function will export all photos on the frame as well as the profile Pictures.

## My Friends


This list contains all the existing connected friends that are allowed to send photos to your frame.

### Change options for a friend.

Use this section to set a friend's permission on your photo frame. Click the options icon  to open the 'Friend Settings' menu. Within this, you can decide whether or not to share the code to the frame. If this is enabled, the friend can retrieve your frame code and share the code to the frame from their Frameo app with other friends.

Under 'Friend Settings', you can delete a friend and remove them from the list. To do so, tap 'Delete a friend'. You will then be asked to confirm the removal of the friend selected. You will be also asked if you would like to remove all photos/videos received from this friend. Once removed this specific friend will no longer have permission to send photos to your frame.

### Add person.

To allow a new person to send you photos and connect with your friend, simply tap the 'Add friend' button  and share the code displayed on the screen with your friend using any of your preferred communication channels (e.g. call, text message).

## Display

### Brightness Level

Adjust the brightness level of the screen.

### Sleep Mode

ClickID Snap 10 Photo Frame has a Sleep Mode feature which you can use to turn off the screen and reduce the power consumption.

The default setting of the ClickID Snap 10 photo frame is to automatically turn off the screen at 23:00 and

turn back on again at 07:00. To change this, you can set the sleep mode start/end time as per your preferences.

*Please note: While in Sleep Mode, your frame will still receive photos as it is not Powered OFF or set to Standby.*

## Slideshow

### Photos Slideshow

#### Timer

Set the duration that a photo should be displayed before showing the next photo.

#### Fill Frame

Set the default frame photo setting. Enable 'Fill frame' as default for the photos to fit the entire frame screen. Disable 'Fill frame' to make the photo fit into the centre of the screen, adding background bars on the sides or top/bottom.

#### Frame Background

Choose between several different frame background options to be shown as bars if the photo does not fill the screen.

#### Photos/ Videos display order

Sets the order in which your photos are displayed on the frame.

- By date taken: Photos are shown in order of when it was taken.
- By date received: Photos are shown in order of when it was received.
- Shuffle: Photos are shuffled and shown in a random order.
- Reverse photo display order: Enable this feature to display the photos in the slideshow arranged from oldest to the newest.

#### Slideshow Widgets

Enable or disable your photo widgets to be visible during photo slideshow or not such as 'Caption', 'Clock' or the 'Weather'.

*Please note: The caption is available on photos received if these have been set by your friend via Frameo App, before being sent to your frame.*

#### Video Slideshow

##### Autoplay

Enables/disables autoplay of videos in the slideshow.

Videos can always be manually started regardless of this setting.

##### Video Playback


Determines how videos should be played when autoplay is enabled.

- Loop videos: The video will loop until the slideshow timer is up.
- Play once: The video will play once and show its thumbnail until the timer is up.
- Play once and continue: The video will play once and continue to the next photo, or video, once it completes.
- Auto mute: Enable/Disable to automatically mute the video volume after a short period of time of not interacting with the frame.


## Video Volume

Adjust the volume level for all video sounds on the frame.

## Wi-Fi

Set the Wi-Fi to which the frame connects with. If you are connecting to a network with a captive portal connection, the network status will say if the Wi-Fi login is required and show this icon . Tap this icon to open a login screen where you can enter credentials to access the network.

## Wi-Fi Details

Tap this icon  to show details about the current connected Wi-Fi.

## Reset Wi-Fi

Tap this icon  to delete all Wi-Fi information and restart your frame.

## Notifications

### Show Notifications.

Enable/disable notifications received in the slideshow (e.g. when a new photo is received).

### Notification Volume

Adjust the volume level for notification sounds.

### Storage Space

Enables/disables notifications shown when frame storage is low.

### Backup

Enable/disable notifications showing if automatic backup has failed.

### Network Connection

Enable/disable notifications showing the network connection status.

### New Photos

Enable/disable notifications showing when a new photo has been received.

### New Friends

Enable/ disable notifications showing when new friends are added.

### Software Update

Enable/disable notifications showing when a new software update has been installed.

**Feature News**

Enable/disable notifications shown when new exciting features are added.

**Time and Date**

Enable/disable notifications shown if the time or date is not set correctly.

**Backup and Restore****Backup frame to external storage (e.g. microSD card)**

Tap to complete a backup of your photos, friends, and settings. The time of the latest successful backup is also displayed here.

*Please Note: If you already have a backup saved on your micro-SD/ external storage this will be overridden.*

**Automatic Backup**

If enabled, your frame will automatically complete a backup within 30 hours of receiving new photos or making changes to your frame.

**Restore from Backup.**

Before you attempt to restore your frame, start by confirming that your backup is up to date. This is confirmed by the date available under the 'Backup frame to external storage (e.g. microSD card)'. If the last backup is too old or if no backup is completed, press the 'Backup frame to external storage (e.g. microSD card)' button to create a new backup.

*Please note: To keep both the old and the new frame operational at the same time after restoring from backup, please make sure that both frames are updated to the latest version beforehand.*

If you wish to restore a backup on a frame that has already been setup, then you must first reset the frame.

Complete a frame reset by pressing the 'Reset frame' button. This will delete all data on the ClickId Snap 10 Photo Frame and reset the frame back to its setup screen.

On the setup screen you can select the 'Restore from backup' button which will restore your frame according to the backup.

If the 'Restore from backup' button isn't visible, then check that the external storage (e.g. microSD card) is correctly inserted into its port. **(Ref.4)**

**Reset Frame**

Removes all data from your frame and restore to its default settings.

By processing this reset you will permanently remove all existing photos, videos, friends/connections, and settings.

**Help Page**

**Guide** - The quick step by step setup guide

**Support** - Access to view frame information

**Privacy Policy** - For more information, please visit <http://privacy.frameo.net>

**About**

**Peer ID** - This is a unique ID for your photo frame.

**Frameo Version** - Shows which version of the Frameo software is currently installed on your frame.

**Check for Update** - Check if an update is available for your frame.

**Beta Program** - If enabled the device will join the Beta program where it will receive updates more frequently and before normal release devices.

**Share anonymous analytics data** - Sharing anonymous analytics data helps us tremendously to improve the Frameo software. We understand if you do not wish to share this data with us. Keep it checked if you wish to help us improve Frameo. Set unchecked to deny the sharing of anonymous analytics data.

Observation	Potential Cause/Solution
<p><b>Do I have to keep the photo frame always plugged?</b></p>	<p>The frame has no battery, therefore must be kept plugged into the mains to be used.</p>
<p><b>I cannot connect the frame to my WI-FI network.</b></p>	<ol style="list-style-type: none"> <li>1. The photo frame only supports 2.4GHz Wi-Fi network and doesn't support 5GHz Wi-Fi. Network support for WPA and WPA2, phone hotspots.</li> <li>2. If your Wi-Fi network is not on the Wi-Fi list, move your frame closer to your router or restart your frame, wait for seconds, and check again.</li> <li>3. Ensure you have entered the correct password. When the password is incorrectly entered, the photo frame displays a validation error window.</li> </ol>
<p><b>I cannot add the frame to my phone Frameo app.</b></p>	<ol style="list-style-type: none"> <li>1. Check to see if your phone's network is working and if the frame is connected to the internet.</li> <li>2. Ensure to enter the correct sharing code which is valid for 12 hours.</li> <li>3. There may be a network delay, please add it multiple times, or reset the photo frame and try again.</li> </ol>
<p><b>My friend cannot share photos via his Frameo App.</b></p>	<ol style="list-style-type: none"> <li>1. There may be a network failure or disconnection on either Frameo App or photo frame.</li> <li>2. Please go to 'Settings&gt;My friends' to check whether your friend is connected or has been deleted from your photo frame.</li> <li>3. Full memory will also cause photos not to be transferred.</li> <li>4. The photo format is not supported. The frame supports the 'JPEG/JPG/ PNG/WEBP' format.</li> </ol>

Observation	Potential Cause/Solution
<p><b>I cannot import photos from SD/USB.</b></p>	<p>Full memory will also cause photos not to be transferred.</p> <p>After the USB-C picture is uploaded successfully, the displayed title is the file name of the picture, and the time is the upload time. If you don't want to display this information, please go to 'Settings&gt;Slideshow&gt;- Show caption' to turn on the option.</p>
<p><b>The picture is not clear.</b></p>	<p>The picture frame will be compressed according to the 1280 pixels according to proportion.</p>
<p><b>My frame freezes.</b></p>	<p>If you encounter such a situation, unplug the power and then re-plug it to see whether it will be turned on.</p>

## Support

If you require further assistance with your new ClickID Snap 10 Photo Frame, please contact our tech support team via email at [support@clickid.co.uk](mailto:support@clickid.co.uk) or our website, [www.clickid.co.uk](http://www.clickid.co.uk)

## Warranty

The ClickID Snap 10 Photo Frame comes with 24 months warranty guaranteed, starting with the date of purchase.



Product Specification		
Type	Details	Descriptions
Product Form	Default Orientation	Portrait
	Dimensions	256*175*22mm
LCD	Screen Size	10.1"
	Screen Resolution	800*1280 mipi
TP	Touch Module	Capacitive
<b>System hardware configuration:</b>		
Type	Details	Descriptions
CPU	Type	RK 3126 Quad-core Cortex-A7 up to 1.2GHz
GPU	Type	Mali-G31MP2 GPU
Multi-media (Hardware decoding)	Photo Viewer	JPG, JPEG, PNG, WEBP
	Video Format	MP4, WebM, FLV, ,MOV,. (UP TO 1080P)
RAM	Capacity	1G DDR3L-1066
ROM Flash	Capacity	32GB
Speaker	Size	Built-in 8Ω/1W speaker x 2
G-sensor	Built-in	Gravity acceleration sensor
<b>Network Connections:</b>		
Type	Details	Descriptions
WIFI	WIFI module	WIFI 2.4GHz. 802.11b/g/n
<b>Interface Configuration:</b>		
Type	Details	Descriptions
Memory card socket	External memory	Micro USB TF
USB interface	Data transfer supportive	USB OTG
DC connector	Power	5V/2A 4.0DC
<b>Necessary Accessories:</b>		
Type	Details	Descriptions
Power adapter	Standard Configuration	5V/2A
<b>Software Configuration:</b>		
Type	Details	Descriptions
Operating System	Operating system version	Andriod 6.0
	Software support	FRAMEO App

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at [www.clickid.co.uk](http://www.clickid.co.uk).
3. Heed all warnings.
4. Follow all instructions.
5. Do not clean the apparatus near or with water.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use accessories specified by the manufacturer.
11. Unplug this apparatus during light storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel.
13. No naked flame sources, such as a lit candle should be placed on the apparatus.
14. Dispose of used electrical products and batteries safely according to your local authority and regulations.

## ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping, splashing or objects filled with water.

The main plug is used to disconnect the device. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat.

## RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished.

**IMPORTANT:** Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.  
Do not open.



Read all instructions carefully before use and keep for future reference.



When servicing, use only identical replacement parts.



### ATTENTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



### CAUTION

RISQUE D'ELECTROCUTION  
NE PAS OUVRI



**IMPORTANT:** Please read all instructions carefully before use and keep for future reference



# CLICKid

**FR**





**FR**

**Cet appareil, ses cordons, et batterie se recyclent**

A DÉPOSER EN MAGASIN



OU

A DÉPOSER EN DÉCHÈTERIE



Points de collecte sur [www.quefairedesdechets.fr](http://www.quefairedesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !